

## ARU 1200

### Terminal Electrolytic Recovery


**Application Range:** 4 to 6 gallons per day (24 hours).

**Typical Silver Discharge:** 0.75 PPM to 3 PPM.

**Application Notes:**

- Replace RePAC cartridge every 300 gallons processed, or every 6 months.
- Limit collection of silver on the cathode to 8-10 pounds.
- Clean out CT-5 tank and overflow fittings every 6 months.

**Typical Installation:**

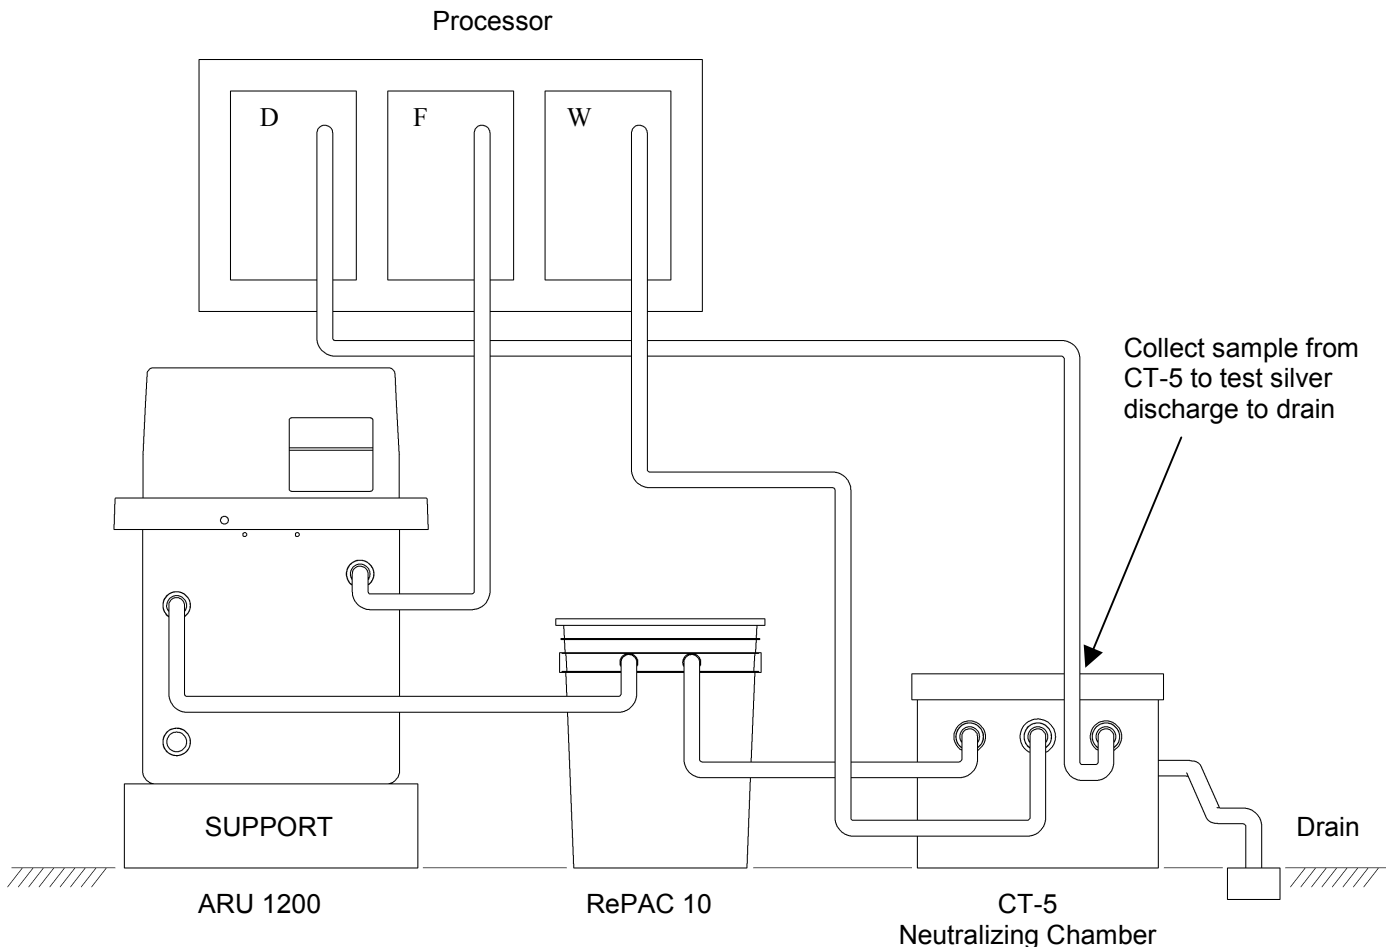

\* Support must be used to raise the unit above the tailing cartridge inlet.