

# Duster

## 3000 S (Standard)

## 3000 FC (Fume Control)

Engineered to remove:

- Dust
- Odors
- Smoke
- VOCs
- Mists
- Spray Powder
- Toxic Fumes
- Pollen and Bacteria
- Clean shop air up to 5,000 sq. ft.
- Floor level pick-up
- Lightweight and mobile
- Operates on standard 110 volts
- No assembly required – ready to use
- Quiet operation
- Heavy duty construction
- Meets OSHA and EPA requirements
- 5 Year warranty



## Specifications

### ELECTRICAL:

Motor, USA made  
1-1/3 HP, 12 Amps, 110 Volts, 1 Phase,  
sealed controls, with a 50 foot (15m)  
heavy duty electrical cord.

### AUTO-FIRE SHUT-OFF:

Thermal protector inside unit.

### BLOWER CAPACITY:

3000 CFM or 85 cubic meters per  
minute with clean filters, without carbon.

### CONSTRUCTION:

Double zinc coated sheet metal with  
baked on powder coat. Light gray color

### WEIGHT:

Net 188 pounds (85 kg), totally mobile,  
shipping weight, 290 pounds (131 kg)

### QUIET OPERATION:

under 67 db

### WARRANTY:

5 years parts replacement

### OPTIONS:

11401 24lb CARBON FILTER  
23-1/2" x 23-1/2" x 11-1/2"  
597mm x 597mm x 290mm

### FILTERS: Made in the USA and Canada.

	Part #	Qty
<b>1. DUST PAD</b> 23-1/2" x 23-1/2" x 2" 597mm x 597mm x 50mm	11703	3
<b>2. INTAKE HEPA FILTER</b> 23-1/2" x 23-1/2" x 4" 597mm x 597mm x 100mm	11204	3
<b>3. CARBON FILTER</b> 23-1/2" x 23-1/2" x 2" – 15lbs 597mm x 597mm x 50mm – 6.8 kg	11406	3
<b>4. MICRO MP85 FILTER</b> 23-1/2" x 23-1/2" x 11-1/2" 597mm x 597mm x 290mm	11401	1



Available in CE

Marketed by

**cpac**  
Imaging


2364 Leicester Road, P.O. Box 175  
Leicester, New York 14481  
www.cpacimaging.com

Phone (585) 382-3223  
(800) 828-6011  
Fax (585) 382-9481

Manufactured in Canada by

**ICA**  
ISLAND CLEAN AIR  
Choose the Air you breathe

**AIRFLOW DIRECTION**

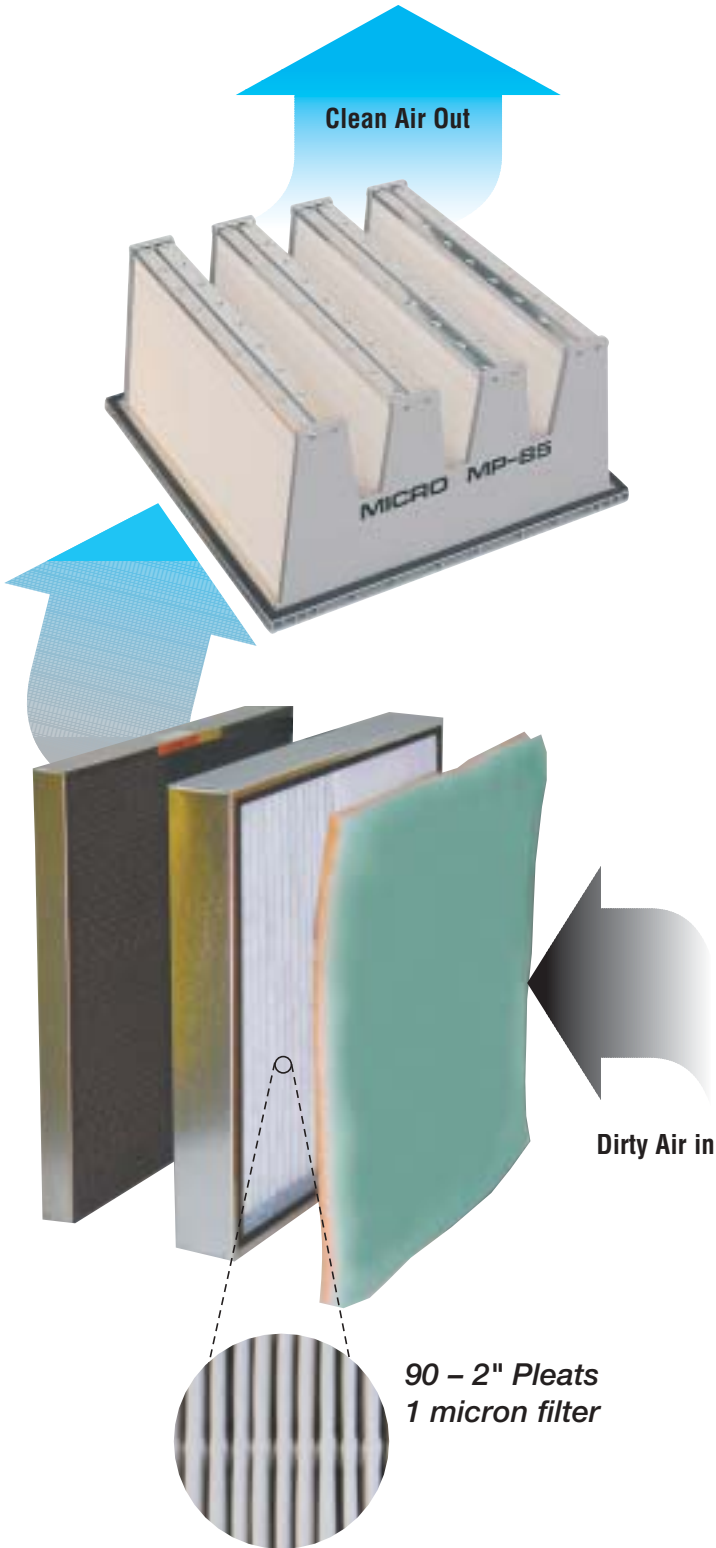

Particle Type	Microns
Duster Intake filters	1.0
Diameter of human hair	50.0 -100.00
Dust becomes visible	Over 18.0
Viruses	Over 0.04

**STANDARD FILTERS**

**11401  
MICRO MP85 FILTER**

High efficiency media to capture pollutants to 0.3 micron. High surface area (193 sq ft). Not Cleanable 1 per unit



**11406  
CARBON FILTER**

Removes fumes and odors. Contains 15 lbs (6.8kg) of activated pellets carbon. Not Cleanable Refillable 3 per unit



**11204  
INTAKE FILTER**

Surface loading media to capture pollutants to 1 micron. Pleated high surface area (60 sq ft), metal frame, (11703 dust pad in front). Vacuum Cleanable Pressure washable 3 per unit



**11703  
DUST PAD**


High capacity media to capture visible dust and spray powder. Used in front of intake filter. Vacuum Cleanable 3 per unit



**OPTIONAL FILTER**

**11401  
24lb CARBON FILTER  
for FC model**

Activated carbon filter to replace MP85 in high fume environments on FC model. Contains 24lbs (11kg) of activated granular carbon Not cleanable 1 per unit

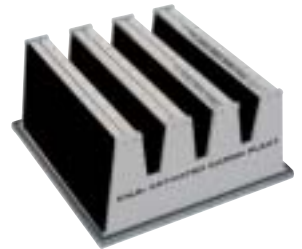

Distributed by: